FOGMAKER

INTERNATIONAL AB

SPARE PARTS CATALOGUE

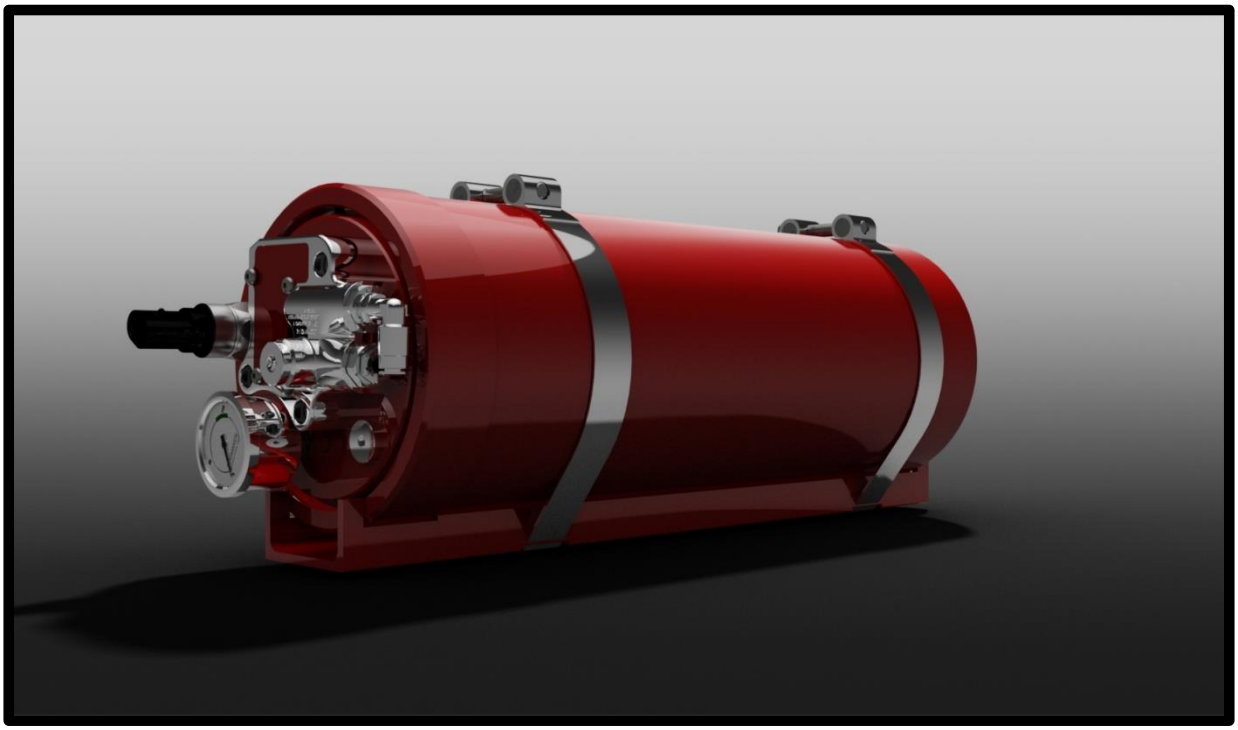

WWW.FOGMAKER.COM

Edition 3.3

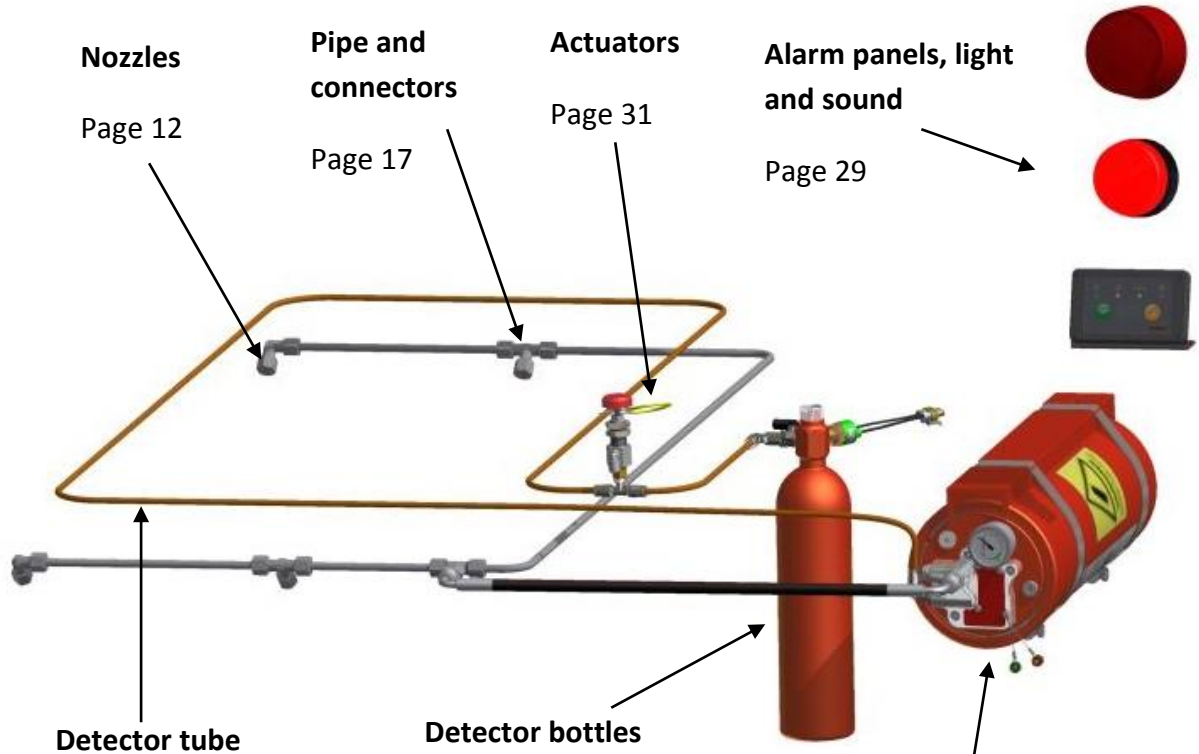
Nozzles
Page 12
Pipe and connectors
Page 17
Actuators
Page 31
Alarm panels, light and sound
Page 29
Detector tube
Page 25
Detector bottles
Page 25
Extinguishers
Page 5

Content

How to understand part numbers for extinguisher cylinders: 4

Extinguishers 5

Extinguisher cylinders, 3.3L 5

Extinguisher cylinders, 4L 5

Extinguisher cylinders, 6.5L 6

Extinguisher cylinders, 7.5L 7

Extinguisher cylinders, 6.6L 7

Extinguisher cylinders, 8L 7

Extinguisher cylinders, 13L 8

Extinguisher cylinders, 15L 8

Extinguisher cylinders, 12L 9

Extinguisher cylinders, 19.5L 9

Extinguisher cylinders, 22.5L 9

Novec Extinguishers 10

Brackets for single tube extinguishers 10

Protection boxes 11

Distribution system 12

Nozzles 12

Distribution hoses, straight-straight connector 14

Distribution hoses, 90°-90° connector 14

Distribution hoses, straight-90° connector 15

Connectors, adapters, washers, pipe and plugs 17

Stainless steel connectors 23

Detection system 25

Detector bottles 25

Detector tube, protection coil, protection tube and 6mm connectors 25

Installation material 28

Alarm units, Sound and Light 29

Actuators and handles 31

Tools 33

Chemicals 34

Revision kits 34

Manuals, labels and stickers 35

How to understand part numbers for extinguisher cylinders:

Single cylinders

Part numbers for single extinguisher cylinders starts with **10XX**, the third number indicates the volume: 3=3.3L, 4=4.0L, 6=6.5L, 7=7.5L. Fourth number indicates type of activation 0=mechanical wire, 1=electrical, 2=hydro pneumatic detector tube. The following extensions on the part number can occur:

-AIR=No gas or fluid, meant for air freight

-MS=Equipped with micro switch for the safety screw

-T=T-connection for detector tube

-0=-5°C extinguishant

-0AS=0°C extinguishant for the Australian market

-01=With detector bottle

-02=Pressure switch, AMP-plug

-020=Release valve, Version 2

-03=Pressure switch, screw terminal (discontinued)

-05=Without manometer

-90=90° angle for the manometer

Double cylinders

Part numbers for double extinguisher cylinders starts with **12XX**, the volume of extinguishant is double the indicated number in the third number, otherwise same as for single extinguisher part numbers.

Triple cylinders

Part numbers for triple extinguisher cylinders starts with **12X3X**, the volume of extinguishant is triple the indicated number in the third number, the fifth number indicates type of activation otherwise same as for single extinguisher part numbers.

Unless otherwise indicated the extinguishant in all extinguisher cylinders is freeze protected to -35 °C.

Extinguishers

Extinguisher cylinders, 3.3L

	Description	Part number
	Extinguisher 3,3L Electrical actuation	1031-020
	Extinguisher 3,3L H.P.actuation -5°C	1032-0-020
	Extinguisher 3,3L H.P.actuation	1032-020
	Extinguisher 3,3L H.P.actuation -5°C Pressure switch	1032-02-0-020
	Extinguisher 3,3L H.P.actuation Pressure switch	1032-02-020
	Empty Extinguisher 3,3L H.P.actuation Pressure switch for Air freight	1032-02-020-AIR
	Extinguisher 3,3L H.P.actuation -5°C Pressure switch Australian market	1032-02-0AS-020
	Extinguisher 3,3L Mechanical actuation	1030*
	Extinguisher 3,3L Electrical actuation	1031* Replaced by 1031-020
	Extinguisher 3,3L H.P.actuation	1032* Replaced by 1032-020

*To be discontinued 2013

Extinguisher cylinders, 4L

	Description	Part number
	Extinguisher 4L Mechanical actuation -5°C	1040-0-020
	Extinguisher 4L Mechanical actuation	1040-020
	Empty Extinguisher 4L Electrical actuation for Air freight	1041-020-AIR
	Extinguisher 4L H.P.actuation	1042-020
	Extinguisher 4L H.P.actuation -5°C Pressure switch	1042-02-0-020
	Extinguisher 4L H.P.actuation Pressure switch	1042-02-020
	Empty Extinguisher 4L H.P.actuation Pressure switch for Air freight	1042-02-020-AIR
	Extinguisher 4L H.P.actuation 0°C Pressure switch Australian market	1042-02-0AS-020
	Extinguisher 4L Mechanical actuation	1040* Replaced by 1040-020
	Extinguisher 4L Mechanical actuation with pressure switch	1040-02*
	Extinguisher 4L Mechanical actuation, Pressure switch, French labels	1040-02-04*
	Extinguisher 4L -35C with pressure switch Mechanical actuation	1040-03*
	Extinguisher 4L Electrical actuation	1041*
	Extinguisher 4L Electrical actuation without manometer, with pressure switch	1041-02-05*
	Extinguisher 4,0L Electrical actuation with pressure and micro switch switch	1041-02-MS*
	Extinguisher 4L H.P.actuation	1042* Replaced by 1042-020
	Extinguisher 4L H.P.actuation with pressure switch	1042-02* Replaced by 1042-02-020

*To be discontinued 2013

Extinguisher cylinders, 6.5L

	Description	Part number
	Extinguisher 6,5L Mechanical actuation	1060-020
	Empty Extinguisher 6,5L Mechanical actuation for Air freight	1060-020-AIR
	Extinguisher 6,5L Electrical actuation Pressure switch Micro switch	1061-02-MS
	Empty Extinguisher 6,5L Electrical actuation Pressure switch Micro switch for Air freight	1061-02-MS-AIR
	Extinguisher 6,5L H.P.actuation -5°C	1062-0-020
	Extinguisher 6,5L HP kit incl. detection bottle not assembled	1062-01-020
	Extinguisher 6,5L H.P.actuation	1062-020
	Extinguisher 6,5L H.P.actuation -5°C Pressure switch	1062-02-0-020
	Extinguisher 6,5L H.P.actuation Pressure switch	1062-02-020
	Empty Extinguisher 6,5L H.P.actuation Pressure switch for Air freight	1062-02-020-AIR
	Empty Extinguisher 6,5L H.P.actuation for Air freight	1062-020-AIR
	Extinguisher 6,5L H.P.actuation 0°C Pressure switch Australian market	1062-02-0AS-020
	Extinguisher 6,5L H.P.actuation -5°C Pressure switch T-connector	1062-02-0-T-020
	Extinguisher 6,5L H.P.actuation Pressure switch Angled manometer	1062-02-90-020
	Extinguisher 6,5L H.P.actuation spec. gas load 27B	1062-27-020
	Extinguisher 6,5L Mechanical actuation	1060*
	Extinguisher 6,5L -35C with pressure switch Mechanical actuation	1060-02-S*
	Extinguisher 6,5L -35C with pressure switch Mechanical actuation	1060-03*
	Extinguisher 6,5L Electrical actuation	1061*
	Extinguisher 6,5L Electrical actuation with pressure switch	1061-02*
	Extinguisher 6,5L H.P.actuation	1062*
	Extinguisher 6,5L H.P.actuation with pressure switch	1062-02*
	Extinguisher 6,5L H.P.actuation tropical with pressure switch and safety relief valve	1062-02-0*
	Extinguisher 6,5L H.P.actuation tropical with pressure switch and safety relief valve T- conn.	1062-02-0-T*
	Extinguisher 6,5L H.P.actuation T-connector, with pressure switch	1062-02-T*
	Extinguisher 6,5L H.P.actuation -5°C with safety relief valve	1062-0-S*
	Extinguisher 6,5L H.P.actuation spec. gas load 27B	1062-27*

*To be discontinued 2013

Extinguisher cylinders, 7.5L

	Description	Part number
	Extinguisher 7,5L H.P.actuation -5°C	1072-0-020
	Extinguisher 7,5 H.P.actuation	1072-020
	Extinguisher 7,5L H.P.actuation -5°C Pressure switch	1072-02-0-020
	Extinguisher 7,5L H.P.actuation Pressure switch	1072-02-020
	Empty Extinguisher 7,5L H.P.actuation Pressure switch for Air freight	1072-02-020-AIR
	Empty Extinguisher 7,5L H.P.actuation for Air freight	1072-020-AIR
	Extinguisher 7,5L H.P.actuation Pressure switch Micro switch	1072-02-MS
	Fogmaker Universal 7.5 L HP Actuation	1072*
	Fogmaker Universal 7.5 L HP Activation with pressure switch	1072-02*
	Extinguisher 7,5L H.P.actuation tropical with pressure switch and safety relief valve	1072-02-0*

*To be discontinued 2013

Extinguisher cylinders, 6.6L

	Description	Part number
	Extinguisher 6,6L H.P.actuation	1232-020
	Extinguisher 6,6L H.P.actuation	1232* Replaced by 1232-020

*To be discontinued 2013

Extinguisher cylinders, 8L

	Description	Part number
	Extinguisher 8L Mechanical actuation	1240-020
	Extinguisher 8L Mechanical actuation Pressure switch	1240-02-020
	Extinguisher 8L Electrical actuation	1241-020
	Extinguisher 8L H.P.actuation Pressure switch	1242-02-020
	Empty Extinguisher 8 H.P.actuation Pressure switch for Air freight	1242-02-020-AIR
	Extinguisher 8L Mechanical actuation	1240* Replaced by 1240-020
	Extinguisher 8L Mechanical actuation with pressure switch	1240-02* Replaced by 1240-02-020
	Extinguisher 8L Mechanical actuation with pressure switch	1240-03* Replaced by 1240-02-020
	Extinguisher 8L Electrical actuation	1241* Replaced by 1241-020
	Extinguisher 8L H.P.actuation	1242*

	Extinguisher 8L H.P.actuation pressure switch	1242-02* Replaced by 1242-02-020

*To be discontinued 2013

Extinguisher cylinders, 13L

	Description	Part number
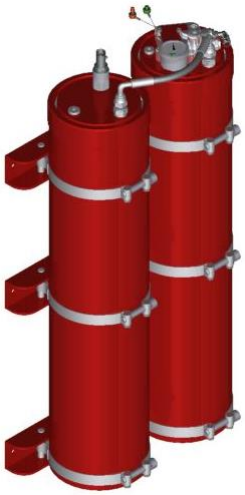	Extinguisher 13L Mechanical actuation Pressure switch	1260-02-020
	Empty Extinguisher 13L Mechanical actuation Pressure switch for Air freight	1260-02-020-AIR
	Extinguisher 13L Electrical actuation	1261-020
	Extinguisher 13L H.P.actuation	1262-020
	Extinguisher 13L H.P.actuation -5°C Pressure switch	1262-02-0-020
	Extinguisher 13L Pressure switch	1262-02-020
	Empty Extinguisher 13L H.P.actuation Pressure switch for Air freight	1262-02-020-AIR
	Extinguisher 13L H.P.actuation Pressure switch Detector cylinder mount. on extinguisher	1262-02-03-020
	Extinguisher 13L H.P.actuation 0°C Pressure switch Australian market	1262-02-0AS-020
	Extinguisher 13L H.P.actuation Pressure switch spec. gas load 27B	1262-02-27-020
	Extinguisher 13L Mechanical actuation	1260*
	Extinguisher 13L Mechanical actuation with pressure switch	1260-02* Replaced by 1260-02-020
	Extinguisher 8L Mechanical actuation with pressure switch	1260-03* Replaced by 1260-02-020
	Extinguisher 13L H.P.actuation	1262* Replaced by 1262-020
	Extinguisher 13L with pressure switch	1262-02* Replaced by 1262-02-020
	Extinguisher 13L H.P.actuation with T-fitting	1262-020-T*
	Extinguisher 13L spec. gas load 27B Pressure switch	1262-02-27* Replaced by 1262-02-27-020
	Extinguisher 13L spec. gas load 27B	1262-27*

*To be discontinued 2013

Extinguisher cylinders, 15L

	Description	Part number
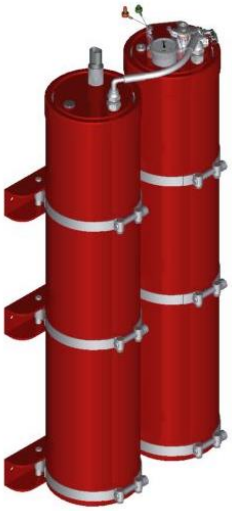	Extinguisher 15L H.P.actuation -5°C Pressure switch	1272-02-0-020
	Extinguisher 15L H.P.actuation Pressure switch	1272-02-020
	Empty Extinguisher 15L H.P.actuation Pressure switch for Air freight	1272-02-020-AIR
	Extinguisher 15L H.P.actuation Pressure switch Micro Switch	1272-02-MS
	Extinguisher 15L with pressure switch	1272-02* replaced by 1272-02-020

*To be discontinued 2013

Extinguisher cylinders, 12L

	Description	Part number
	Extinguisher 12L H.P.actuation (3x4L)	12432-020
	Extinguisher 12L H.P.actuation incl. 1656 (3x4L)	12432-03-020
	Extinguisher 12L H.P.actuation inkl 1656 (3x4l)	12432-03* Replaced by 12432-03-020

*To be discontinued 2013

Extinguisher cylinders, 19.5L

	Description	Part number
	Extinguisher 19,5L H.P.actuation -5°C Pressure switch	12632-02-0-020
	Extinguisher 19,5L H.P.actuation Pressure switch	12632-02-020
	Empty Extinguisher 19,5L H.P.actuation Pressure switch for Air freight	12632-02-020-AIR
	Extinguisher 19,5L H.P.actuation 0°C Pressure switch Australian market	12632-02-0AS-020

*To be discontinued 2013

Extinguisher cylinders, 22.5L

	Description	Part number
	Extinguisher 22,5L H.P.actuation Pressure switch	12732-02-020
	Empty Extinguisher 22,5L H.P.actuation Pressure switch for Air freight	12732-02-020-AIR
	Empty Extinguisher 22,5L H.P.actuation for Air freight	12732-020-AIR

*To be discontinued 2013

Novec Extinguishers

	Description	Part number
	Extinguisher Novec 0,9L with 14 bar pressure switch	1008
	Extinguisher Novec 0,9L with 5 bar and 14 bar pressure switch	1008-02

Brackets for single tube extinguishers

	Description	Part number
	Assembly fitting/Bracket 3.3 l extinguisher	2400
	Assembly fitting/Bracket 4 l extinguisher	2402
	Assembly fitting/Bracket 6.5 l extinguisher	2403
	Assembly fitting/ Bracket 7.5 l extinguisher	2405
	Assembly fitting double extinguisher (upper)	2440
	Assembly fitting double extinguisher (lower)	2441
	Assembly fitting triple extinguisher (upper)	2443
	Assembly fitting triple extinguisher (lower)	2444
	Heavy duty clamp extinguisher	5105

Protection boxes

	Description	Part number
	Protection box 3.3/4 l	1350
	Protection box 6.6/8 l (2x3.3/4)	1351
	Protection box 6.5 l	1352
	Protection box 13 l (2x6.5)	1353
	Protection box 7.5 l	1354
	Protection box 15 l (2x7.5)	1355
	Protection box 22.5 l (3x7.5)	1356
	Protection box 12 l (3x4)	1357
	Protection box 19.5 l (3x6.5)	1358
	Protection box 3.3/4 l Stainless steel	1360
	Protection box 6.6/8 l (2x3.3/4) Stainless steel	1361
	Protection box 6.5 l Stainless steel	1362
	Protection box 13 l (2x6.5) Stainless steel	1363
	Protection box 7.5 l Stainless steel	1364
	Protection box 15 l (2x7.5) Stainless steel	1365
	Protection box 15 l (2x7.5) Stainless steel extra deep	1365-40
	Protection box 22.5 l (3x7.5) Stainless steel	1366
	Protection box 12 l (3x4) Stainless steel	1367
	Protection box 19.5 l (3x6.5) Stainless steel	1368
	Protection box 13 l (2x6,5) Plastic red	1369
	Protection box Detector bottle Stainless steel	1370

Distribution system

Nozzles

	Description	Part number
	Spray nozzle 0,8 l/min at 30 bar Swagelok (incl. protection cap)	15020-010
	Spray nozzle 0.8 l/min at 30 bar (incl. pink protection cap)	1502-010
	Spray nozzle 1.2 l/min at 30 bar (incl. orange protection cap)	1503-010
	Spray nozzle 3.5 l/min at 30 bar (incl. protection cap)	1506-010
	Spray nozzle 1.0 l/min at 30 bar USA model (incl. yellow protection cap)	1509-010
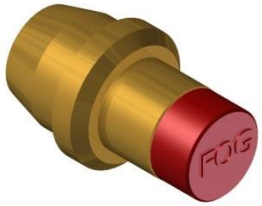	Spray nozzle 0.8 l/min at 30 bar Swagelok (incl. protection cap)	15020* Replaced by 15020-010
	Spray nozzle 0.8 l/min at 30 bar (incl. protection cap)	1502* Replaced by 1502-010
	Spray nozzle 1.2 l/min at 30 bar (incl. protection cap)	1503* Replaced by 1503-010

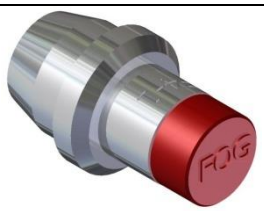	Spray nozzle 0.8 l/min at 30 bar Stainless Steel (incl. protection cap)	1504 Discontinued
	Spray nozzle 1/4" F4 0.8 l/min at 30 bar	1500
	Spray nozzle 1/4" F6 1.2 l/min at 30 bar	1501
	Spray nozzle 1/4" F18 3.5 l/min at 30 bar SBF 128	15010
	Protection cap for 150X-010 nozzles red	1505-010* Replaced by 1502-01X X=1,2,3 or 4
	Protection cap for 1502-010 nozzles pink	1505-011
	Protection cap for 1503-010 nozzles orange	1505-012
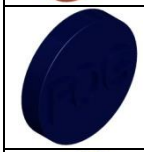	Protection cap for 1506-010 nozzles dark purple	1505-013
	Protection cap for 1509-010 nozzles yellow	1505-014
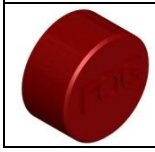	Protection cap for 150X nozzles red	1505

Distribution hoses, straight-straight connector

	Description	Part number
	HP hose 0,32m straight-straight	4174
	HP hose 0,55m straight-straight	4101-00
	HP hose 0,75m straight-straight	4109
	HP hose 1,0m straight-straight	4126
	HP hose 1,2m straight-straight	41041
	HP hose 1,25m straight-straight	4118
	HP hose 1,25m straight-straight with protection conduit	4118-1
	HP hose 1,5m straight-straight	4108
	HP hose 2,0m straight-straight	4111
	HP hose 2,0m straight-straight with protection conduit	4111-1
	HP hose 2,5m straight-straight	4112
	HP hose 2,7m straight-straight	4156
	HP hose 3,0m straight-straight	4113
	HP hose 3,5m straight-straight	4120
	HP hose 4,2m straight-straight	4128
	HP hose 4,5m straight-straight	4114
	HP hose 4,5m straight-straight with protection conduit	4114-1
	HP hose 5,0m straight-straight	4116
	HP hose 5,5m straight-straight	4115
	HP hose 5,8m straight-straight	4158
	HP hose 6,1m straight-straight	4159
	HP hose 7,3m straight-straight	4124
	HP hose 7,5m straight-straight	4164
	HP hose 8,5m straight-straight	4185
	HP hose 9,7m straight-straight	4119

Distribution hoses, 90°-90° connector

	Description	Part number
	HP hose 0,24m 90-90	4137
	HP hose 1,25m 90-90	4121
	HP hose 1,8m 90-90	4167
	HP hose 2,5m 90-90	4154
	HP hose 3,4m 90-90	4163
	HP hose 5,0m 90-90	4157
	HP hose 5,2m 90-90	4161
	HP hose 7,0m 90-90	4144

Distribution hoses, straight-90° connector

	Description	Part number
	HP hose 0,2m straight-90	4150
	HP hose 0,32m straight-90	4100
	HP hose 0,32m straight-90 with protection conduit	4100-1
	HP hose 0,4m straight-90	4165
	HP hose 0,475m straight-90	4100-475
	HP hose 0,5m straight-90	4107
	HP hose 0,55m straight-90	4101
	HP hose 0,7m straight-90 with protection conduit	4102-1
	HP hose 0,7m straight-90	4102
	HP hose 0,72m straight-90	4133
	HP hose 0,8m straight-90	4103
	HP hose 0,87m straight-90	4148
	HP hose 1,0m straight-90	4155
	HP hose 1,1m straight-90	4168
	HP hose 1,2m straight-90	4104
	HP hose 1,2m straight-90 with protection conduit	4104-1
	HP hose 1,30 m straight-90	4109-130
	HP hose 1,4m straight-90	4176
	HP hose 1,5m straight-90	4105
	HP hose 1,5m straight-90 with protection conduit	4105-1
	HP hose 1,65m straight-90	4149
	HP hose 1,75 m straight-90	4109-175
	HP hose 1,9m straight-90	4166
	HP hose 2,0m straight-90 with protection conduit	4106-1
	HP hose 2,0m straight-90	4106
	HP hose 2,5m straight-90	4122
	HP hose 2,5m straight-90 with protection conduit	4122-1
	HP hose 2,7m straight-90	4127
	HP hose 3,0m straight-90	4123
	HP hose 3,0m straight-90 with protection conduit	4123-1
	HP hose 3,2m straight-90	4169
	HP hose 3,2m straight-90 with protection conduit	4169-1
	HP hose 3,4m straight-90	4134
	HP hose 3,5m straight-90	4173
	HP hose 3,8m straight-90	4138
	HP hose 4,0m straight-90	4125
	HP hose 4,0m straight-90 with protection conduit	4125-1
	HP hose 4,2m straight-90	4151
	HP hose 4,5m straight-90	4145
	HP hose 4,7m straight-90	4139
	HP hose 4,8m straight-90	4146
	HP hose 5,0m straight-90	4140
	HP hose 5,5m straight-90	4141

	HP hose 5,5m straight-90 with protection conduit	4141-1
	HP hose 5,7m straight-90	4135
	HP hose 5,8m straight-90	4162
	HP hose 6,0m straight-90	4160
	HP hose 6,7m straight-90	4147
	HP hose 6,7m straight-90 with protection conduit	4147-1
	HP hose 7,0m straight-90	4170
	HP hose 7,0m straight-90 with protection conduit	4170-1
	HP hose 7,1m straight-90	4171
	HP hose 7,2m straight-90	4172
	HP hose 7,5m straight-90	4142
	HP hose 7,5m straight-90 with protection conduit	4142-1
	HP hose 8,0m straight-90	4129
	HP hose 8,0m straight-90 with protection conduit	4129-1
	HP hose 8,35m straight-90	4136
	HP hose 8,5m straight-90	4143

Connectors, adapters, washers, pipe and plugs

	Description	Part number
	Stainless steel piping 8x1150mm	4008-115
	T-connector EVL 8 L	4300
	T connector 1/4 UFXUFXUF	4301
	T connector 1/4 IRxIRxIR	4302
	T connector1/4" ufxirxuf t	4303
	T connector1/4" ufxirxuf t	4303-010
	Nozzle Connector 1/4 ufxif	4304

	Bulk head connector Hydraulic hose 1/4 ufxuf	4305
	Sleeve 1/4"	4306
	Sleeve 1/8"	4306-18
	Nipple 1/4 outside thread	4307
	Nipple 1/8 outside thread	4307-18
	Cylindrical swivel nut 1/4 outside thread	4308
	Elbow nipple 90 degrees 1/4 UFxIR	4309
	Connector nipple 1/4UTV-1/8INV	4313
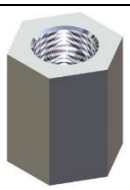	Sleeve 1/4""-1/8"""	4316

	Sleeve 1/4"-3/8"	4321
	Flush connector to 8L compression fitting swivel nut	4325-010
	Flush connector with 1/4" BSPT ext. straight th. and sealing	4325-011
	Flush connector M16x2 to 1/4" BSPT interior semi fabr.	4325-012
	Straight connector 8 X 1/4	4400
	Equal Tee 8x8x8	4401

	Straight connector 8x8	4402
	Stud Branch Tee 8x1/4"x8	4403
	G-Threaded female Stud connector 8 x 1/4''	4404
	Bulkhead connection piping 8mm	4405
	Bulkhead 90 degrees elbow Piping 8mm	4406
	Equal cross 8x8x8x8	4408

	Equal 90 degrees Elbow 8x8	4409
	8 mm cutting ring	4490
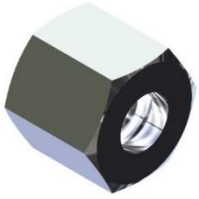	Nut for 8 mm cutting ring	4491
	Schrader 1/8" IF brass complete with cap	4415-000
	Schrader 1/8" brass	4415-010
	Schrader valve core	4415-020
	Schrader valve opener for 4906-010	4415-021
	Schrader valve gasket for 4906-010 Black	4415-022
	Schrader valve gasket for 4906-010 Green	4415-023
	Schrader valve tool for 4906-010	4415-025
	Spare part valve tool for 4906-010	4415-0251
	Schrader valve gasket 10 pcs for 4906-010	4415-122

	Steel rubber washer M20	5000
	Steel rubber washer 1/8"	5005
	Steel rubber washer 1/4	5006
	Steel rubber washer 3/8	5007
	Plane washer 8,4	5008
	Plane washer 8,4	5008-06-18
	Plane washer 8,4	5008-08-24
	Copper washer	5009
	Aluminium washer 6-10 X 1	5011
	Washer 5,3/10/1 RF	5015
	Washer 4,3/9/0,8 RF	5015-430908-A2
	Washer 8,4 stainless steel	5018
	Plug 1/8"	5049
	Plug for the filling nipple 1/4"	5050

Stainless steel connectors

	Description	Part number
	Nipple 1/4" UFxUF Stainless steel	4607
	Bulk head connector 1/4 stainless steel	4385
	Sleeve 1/4" Stainless steel	4386
	Sleeve 1/4-1/8 stainless steel	4396
	Equal 90 degrees Elbow 8x8 Stainless steel	4452
	Straight connector 8x8 Stainless steel	4465
	Straight connector 8x1/4" Stainless steel	4466

	T-connector 8x8x8 Stainless steel	4467
	T-connector 8x8x1/4" Stainless steel	4468
	Nozzle connector 8X1/4"IF Stainless steel	4469
	Stainless steel rubber washer 1/8"	5605
	Stainless steel rubber washer 1/4"	5606

Detection system

Detector bottles

	Description	Part number
	Hydro-pneum. detect. cyl. 31bar with 5 and 14 bar pressure switch T-fitting	1654
	Hydro-pneum. detect. cyl. 24bar with 5 and 14 bar pressure switch T-fitting	1654-00-24
	Hydro-pneum. detect. cyl. 31bar with 5 and 14 bar pressure switch L-fitting	1655
	Hydro-pneum. detect. cyl. 24bar with 5 and 14 bar pressure switch L-fitting	1655-00-24
	Hydro-pneum. detect. cyl. 31bar with 14 bar pressure switch T-fitting	1656
	Hydro-pneum. detect. cyl. 24bar with 14 bar pressure switch T-fitting	1656-00-24
	Air-freight Hydro-pneum. detect. cyl. (no gas) with 14 bar pressure switch T-fitting	1656-AIR
	Hydro-pneum. detect. cyl. 31bar with 14 bar pressure switch L-fitting	1657
	Hydro-pneum. detect. cyl. 24bar with 14 bar pressure switch L-fitting	1657-00-24
	Air-freight Hydro-pneum. detect. cyl. (no gas) with 14 bar pressure switch l-fitting	1657-AIR
	Detector gas cylinder 31bar with 14 bar pressure switch L-fitting	1740
	Detector gas cylinder 31bar with 14 bar pressure switch T-fitting	1740-06

Detector tube, protection coil, protection tube and 6mm connectors

	Description	Part number
	Fogmaker hydro-pneum. detection tube (3,8/6) translucid / meter	40380
	Gas detector tube (Red)	4024
	Detection tube coupling R6-1/8	4250
	Detection tube T-coupling T6-1/8-6	4253
	Detection tube coupling SR L6-1/8	4254
	Coupling SR L6-M5	4254-M5

	Detection tube straight coupling 6mm - 6mm	4255
	Detection tube T-coupling	4256
	End plug detection tube	4258
	End plug detection tube with schrader valve	4258-03
	End plug T connection detect.tube with schrader valve	4258-04
	Cap 1/8	4259
	Protection conduit Fogmaker 8,4mm orange /m	4713
	Protection conduit Fogmaker 8,4/11,7mm black/m	47131
	Protection conduit Fogmaker 8,4/11,7mm red/m	47132
	Protection conduit Fogmaker orange 8,4mm 100/ M	4714

	Protection conduit Fogmaker orange 10mm / M	4715
	Protection conduit Fogmaker 10/13,4mm red/m	47152
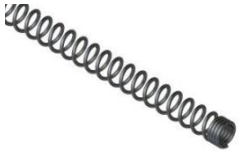	6 mm protective coil 1,0m /unit	4291
	6 mm protective coil 4,5m/unit	4294
	6 mm protective coil 5m /unit	4295
	6 mm protective coil 6m /unit	4296
	6 mm protective coil 7m/unit	4297
	6 mm protective coil 8m/unit	4298

Installation material

	Description	Part number
	Locknut M6	5222
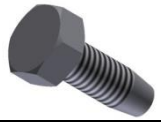	Screw, Self-tapping M6x16	5246
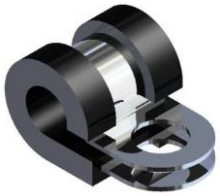	Brace/clamps 6/15 W4	5306
	Brace/clamps 8/15 W4	5308
	Brace/clamps 8/20 W4	5308-20
	Brace/clamps 10/15 W4	5310
	Brace/clamps 12/15 W4	5312
	Brace/clamps 14/15 W4	5314
	Brace/clamps 14/20 W4	5314-20
	Brace/clamps 18/15 W4	5318
	Brace/clamps 18/20 W4	5318-20
	Brace/clamps 20/12 W1	5320
	Brace/clamps 20/20 W1	5320-20
	Brace/clamps 21/12 W1	5321
	Brace/clamps 22/12 W1	5322
	Brace/clamps 22/20 W4	5322-20
	Brace/clamps 23/12 W1	5323
	Brace/clamps 28/12 W1	5328
	Brace/clamps 30/15 W4	5330
	Brace/clamps 35/12 W1	5335
	Brace/clamps 40/12 W1	5340
	Brace/clamps 51/12 W1	5351
	Brace/clamps 70/15 W1	5370
	Brace/clamps 70/20 W1	5371
	Brace/clamps 73/20 W4	5373-20
	Brace/clamps 74/20 W1	5374-20
	Brace/clamps 80/25 W1	5380-25
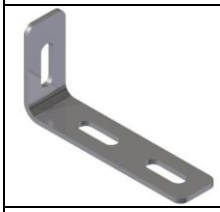	L-Bracket Stainless Steel 50 x 60	5385
	L-Bracket Stainless Steel 50 x 105	5386
	L-Bracket Stainless Steel 50 x 150	5387
	Cable tie L=100 B=2,5 black	8931
	Cable tie L=202 B=4,6 black	8935
	Cable tie L=300 B=4,6	8936
	Cable tie L=380 B=7,6 black	8938
	Cable tie L=370 B=12,5 black	8939

Alarm units, Sound and Light

	Description	Part number
	Alarm kit (mounted in dashboard)	1747-020-00
	Alarm kit (mounted in dashboard) 12V	1747-020-12
	Alarm kit for Bus - Spain	1747-ESP
	Alarm kit (mounted in dashboard)	1747* Replaced by 1747-020-00
	Alarm kit for Bus with M connector	1747-01* Replaced by 1747-020-00
	Kit Alarm panel for 1 press.switch	1746-071
	Kit Alarm panel for 2-3 press.switches	1746-072
	Kit Alarm panel with connector and pins	1746-074
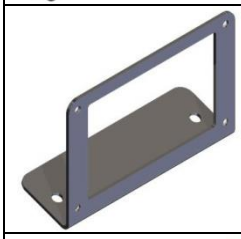	Mounting bracket for Alarm panel for 1-3 press.switches	1746-055
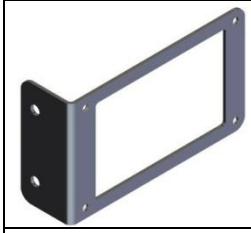	Mounting bracket for Alarm panel for 1-3 press.switches	1746-065
	Alarm panel internal aut (Eng)	1745-01-002* Replaced by 1747-07X
	Alarm panel internal aut (Italian)	1745-01-005* Replaced by 1747-07X
	Alarm panel free standing for 1 press.switch	1746* Replaced by 1747-071
	Alarm panel free standing for 1-3 press.switches	1746-01* Replaced by 1747-07X
	Alarm panel Free-standing	1746-01-002* Replaced by 1747-07X
	Alarm panel free standing 2-channels AC/Engine	1746-02* Discontinued

	Alarm Panel Heavy Duty	1748
	Alarm Panel Heavy Duty Swe	1748-00-01
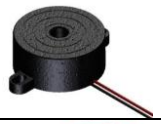	Buzzer	1750
	Buzzer Compact	1750-05
	Alarm siren 4 Rus 127 24V	1751
	Alarm siren 4 Rus 127 12V	1752
	Wall mount for siren Banshee	1753
	Optical alarm strobe red 24V/2W with mount	1760
	Angle bracket IP65 for optical alarm	1765
	Relay change over 24V 22A/10A	1795
	Relay socket multi-purpose	1796
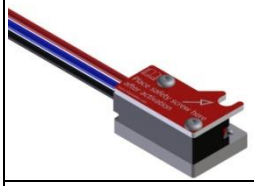	Micro switch kit	6009-020
	Fuse holder	6910
	Fuse 5A	6912
	Connector 2 pin complete with pins and sealing	69831
	Connector 2 socket complete with sockets and sealing	69841
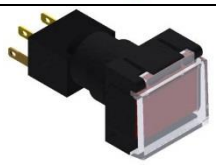	Red push button with cover	6992

Actuators and handles

	Description	Part number
	0,340 m activation wires incl. security stop.	1309-00340-00
	0,340 m activation wires incl. security stop. Without clamps	1309-00340-01
	0,550 m activation wires incl. security stop. Without clamps	1309-00550-00
	0,550 m activation wires incl. security stop. Without clamps	1309-00550-01
	0,750 m activation wires incl. security stop.	1309-00750-00
	0,750 m activation wires incl. security stop. Without clamps	1309-00750-01
	0,950 m activation wires incl. security stop. with clamps	1309-00950-00
	0,950 m activation wires incl. security stop. Without clamps	1309-00950-01
	2,270 m activation wires incl. security stop.	1309-02270-00
	2,270m activation wires incl. security stop. Without clamps	1309-02270-01
	2.5m actuation wire incl. safety interlock.	1310
	2.5m actuation wire incl. safety interlock, no clamps	1310-01
	6m actuation wire incl. safety interlock	1311
	6m actuation wire incl. safety interlock, no clamps	1311-01
	10m actuation wire incl. safety interlock.	1312
	10m actuation wire incl. safety interlock, no clamps	1312-01
	Handle kit for wire with clamps, no wire	1313
	Handle kit for wire without clamps, no wire	1313-01
	Manual actuator detection tube Heavy duty incl cover	1315-025
	Manual actuator detection tube	1316
	Manual actuator detection tube	1317* Discontinued Replaced by 1316
	Holder (long) Mechanical actuator detection tube- manual	1317-05 Replaced by 1317-07
	Holder (short) Mechanical actuator detection tube- manual	1317-06

	Holder (long) Mechanical actuator detection tube- manual	1317-07
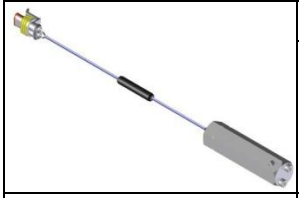	Electrical actuator detection tube	1318
	Electrical actuator detection tube US mod	1318-05-M
	Electrical actuator detection tube rep. kit	1318-R
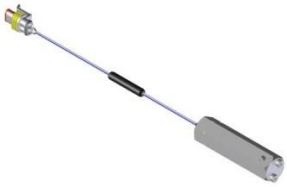	Electrical actuator detection tube for Loco	1318-T
	Wire split for 2 actuation wires	1319
	Safety interlock large for wire handle	1321
	Protection for wire handle -heavy duty	1322
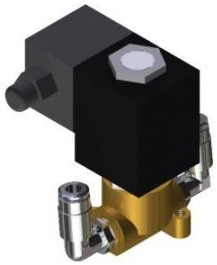	Solenoid valve 1/8" NO 24VDC	4926

Tools

	Description	Part number
	Bottle with pump for prefilling detector tube	1012-01
	Filling tool extinguisher R1/4"	1800
	Hook knife small	1804-05
	Hook knife big	1804-06
	Pressing tool. Elpress T-2258	1805-010
	Pressing tool. Elpress DRB 0115	1805-020
	Cutting tool - Stainless steel piping	1807
	Pipe bending tool R8	1808
	Cutting tool - Detection tube	1809
	Filling station complete	1810
	Filling pump with hose	1811
	Filling tool kit for detection tube	1812-05
	Tool for nozzle 1/4"	1819
	Dismantling tool for extinguisher cover	1820
	Protection tool O-ring high pressure piston valve 6092	1821
	Tool for refilling of the detection cylinder	1970
	Tool for evacuation of gas, detection cylinder	1971
	Tool univ. for gas filling in extinguisher and detect. cylinder	1975
	Tool for lowering pressure in detection system 60mm manometer	1976-010
	Tool for flushing of distribution system fits to filling pump	1977-010

Chemicals

	Description	Part number
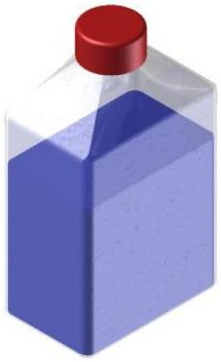	Extinguishant Concentrate -0 C 0,75L (gives 25 liters)	7020-002-01
	Detector fluid red 1 liter	7031
	Detector fluid red 5 liters	7032
	Detector fluid red 0.25 liter	7033
	Extinguishant Concentrate 0C 1 liter	7100-01
	Extinguishant Concentrate 0C 5 liters	7100-05
	Silicone oil dow corning 200 350 cs / kg	7900
	Loctite 577 250 ml	79031
	Loctite 577, 50ml	7904
	Molykote 111 C 100g	7907
	Molykote 111 C 1kg	79071
	Loctite 8009, 453g	7920
	Extinguishant -35C 1000 liters	1831-1000
	Extinguishant -35C 200 liters	1831-200
	Extinguishant -0 °C 25 liters	1890
	Extinguishant -35 °C 25 liters	1891

Revision kits

	Description	Part number
	Refilling kit extinguisher for 5 times excl. liquid	1929
	Revision kit E single extinguisher	1930
	Revision kit M single extinguisher	1931
	Revision kit HP single extinguisher	1932
	Revision kit E double extinguisher	1933
	Revision kit M double extinguisher	1934
	Revision kit HP double extinguisher	1935
	Revision kit vertically valve M single	1936
	Revision kit vertically valve M double	1937
	Revision kit vertically valve E single	1938
	Revision kit vertically valve E double	1939

M=Mechanical, E=Electrical, HP=Hydro pneumatic activation

Manuals, labels and stickers

	Description	Part number
	Material Safety Data Sheet detector fluid Blue English	80040-001-001
	Material Safety Data Sheet detector fluid Blue Deutsch	80040-001-003
	Material Safety Data Sheet detector fluid Red Swedish	80041-001-001
	Material Safety Data Sheet detector fluid Red English	80041-001-002
	Material Safety Data Sheet detector fluid Red German	80041-001-003
	Material Safety Data Sheet detector fluid Red French	80041-001-006
	Material Safety Data Sheet extinguish liquid 0C English	80050-001
	Material Safety Data Sheet extinguish liquid 0C concentrate English	80051-001
	Material Safety Data Sheet extinguish liquid 0C concentrate Swe	80051-011
	Material Safety Data Sheet extinguish liquid -35 English	80053-001
	Material Safety Data Sheet extinguish liquid -35 Swe	80053-002
	Material Safety Data Sheet extinguish liquid -35 DE	80053-003
	Material Safety Data Sheet extinguish liquid -35 French	80053-006
	Installation manual SWE	8010-001
	Installation manual ENG	8010-002
	Installation manual DE	8010-003
	Installation manual NL	8010-004
	Installation manual IT	8010-005
	Installation manual FR	8010-006
	Installation manual ESP	8010-007
	Installation manual PL	8010-008
	Installation manual FI	8010-009
	Service Manual Swedish edition	8011-001
	Service Manual English edition	8011-002
	Service Manual German edition	8011-003
	Service Manual Dutch edition	8011-004
	Service Manual Italian edition	8011-005
	Service Manual French edition	8011-006
	Service Manual Spanish edition	8011-007
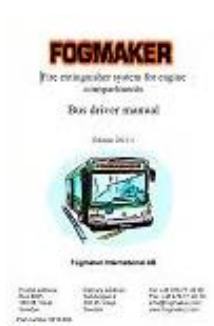	User Manual Bus Swedish edition	8012-001
	User Manual Bus English edition	8012-002
	User Manual Bus German edition	8012-003
	User Manual Bus Dutch edition	8012-004
	User Manual Bus Italian edition	8012-005
	User Manual Bus French edition	8012-006
	User Manual Bus Spanish edition	8012-007
	User Manual Bus Finnish edition	8012-010
	User Manual Bus Turkish edition	8012-011

	User Manual Contract Machine Swedish edition	8013-001
	User Manual Contract Machine English edition	8013-002
	User Manual Contract Machine German edition	8013-003
	User Manual Contract Machine Dutch edition	8013-004
	User Manual Contract Machine Italian edition	8013-005
	User Manual Contract Machine French edition	8013-006
	User Manual Contract Machine Spanish edition	8013-007
	User Manual Contract Machine Roman edition	8013-008
	User Manual Contract Machine Norwegian edition	8013-009
	Revision Manual Swedish edition	8014-001
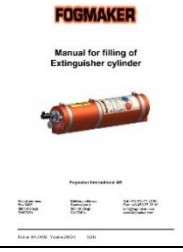	Refill Manual Swedish edition	8015-001
	Refill Manual English edition	8015-002
	Refill Manual German edition	8015-003
	Refill Manual Turkish edition	8015-011
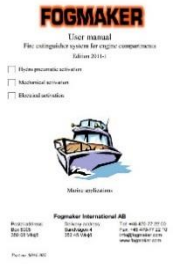	User Manual Marine SWE	8016-001
	User Manual Marine ENG	8016-002
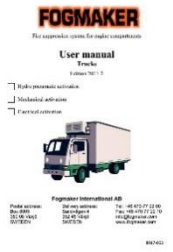	User Manual Trucks SWE	8017-001
	User Manual Trucks ENG	8017-002
	Installation manual 6009-020 ENG	8018-002
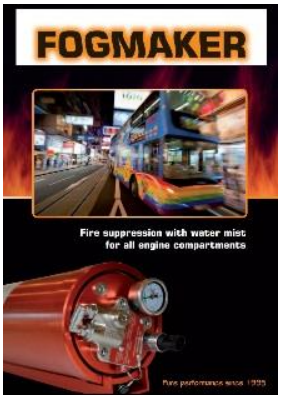	Brochure bus 2012 edition Swedish	8050-01-001
	Brochure bus 2012 edition English	8050-01-002
	Brochure bus 2012 edition German	8050-01-003
	Brochure bus 2012 edition Dutch	8050-01-004
	Brochure bus 2012 edition Italian	8050-01-005
	Brochure bus 2012 edition Spanish	8050-01-007
	Brochure bus 2012 edition Polish	8050-01-008
	Brochure bus 2012 edition Finnish	8050-01-009
	Brochure bus 2012 edition Czech	8050-01-010
	Brochure bus 2012 edition Turkish	8050-01-011
	Brochure bus 2012 edition Romanian	8050-01-012
	Instruction for 4926	8081-001

	Wiring diagram 1747/6722	8082
	Wiring diagram 1747-020/6722-020	8082-20
	Wiring diagram 1747-020/6722-020 Extra relay	8082-21
	Wiring diagram 1747-026/6722-026	8082-26
	Instruction "installing valve hose"	8090
	Instruction "installing activation wire"	8091
	Instruction filling/refilling detector cylinder SWE	8092-01
	Instruction filling/refilling detector cylinder TR	8092-011
	Instruction filling/refilling detector cylinder ENG	8092-02
	Instruction filling/refilling detector cylinder DE	8092-03
	Instruction Pressure adjustment detector cylinder Swedish	8093-01
	Instruction Pressure adjustment detector cylinder English	8093-02
	Instruction Pressure adjustment detector cylinder German	8093-03
	Instruction manual activator 1316 ENG-SWE	8094
	Instruction "installing the alarm panel 1746-050"	8096-050-01
	Instruction "installing the alarm panel 1748"	8097-00
	Instruction manual activator 1315-025 ENG-SWE	8099

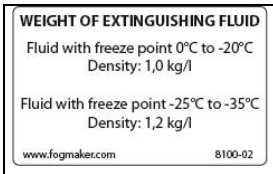	Label/Sticker Density extinguishing fluid ENG	8100-02
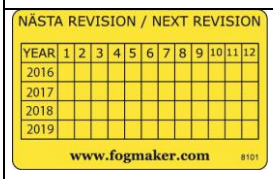	Label/Sticker Next Revision ENG-SWE	8101
	Label/Sticker Next Revision ESP	8101-07
	Label/Sticker Fire ext. Warning DE	8103
	Label/Sticker Fire ext. Warning ENG	8104
	Label/Sticker Fire ext. Warning ESP	8104-07
	Label/Sticker Year marker Next service	8105
	Label/Sticker Marker freeze point extinguishant	8106
	Label/Sticker "Safety screw" ENG	8107
	Label/Sticker "Safety screw" TR	8107-011
	Label/Sticker "Safety screw" FR	8217
	Label/Sticker "Safety screw" ESP	8423
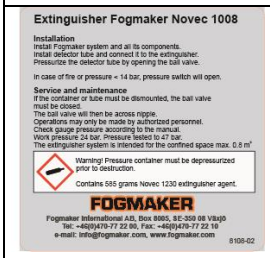	Label/Sticker "Extinguisher Novec" SWE	8108-01
	Label/Sticker "Extinguisher Novec" ENG	8108-02
	Label/Sticker "Extinguisher Novec" ESP	8108-07
	Label/Sticker "Extinguisher Novec" RO	8108-08
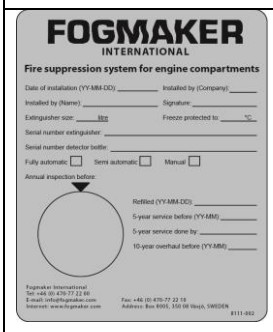	Label/Sticker "Annual control" SWE	8111-001
	Label/Sticker "Annual control" ENG	8111-002
	Label/Sticker "Annual control" ESP	8111-007

	Label/Sticker hydro/pneumatic detection cylinder ENG	8120-01
	Label/Sticker hydro/pneumatic detection cylinder FR	8120-03
	Label/Sticker hydro/pneumatic detection cylinder SWE	8120-05
	Label/Sticker hydro/pneumatic detection cylinder ESP	8120-07
	Label/Sticker "Warning Pressure cylinder" ENG	8123
	Label/Sticker "Warning Pressure cylinder" FR	8216
	Label Detector Liquid Red 250 ml ENG	8125-01-01
	Label Detector Liquid Red 5L ENG	8125-01-02
	Label Detector Liquid Red 250 ml FR	8125-06-01
	Label Detector Liquid Red 5L FR	8125-06-02
	Label Detector Liquid Red 250 ml ESP	8125-07-01
	Label Detector Liquid Red 5L ESP	8125-07-02
	Label extinguisher fluid 0,75 litre concentrated (AFFF) ENG	8127-002-01
	Label extinguisher fluid 5 litre conc. 0°C (AFFF) ENG	8127-002-05
	Label extinguisher fluid 0,75 litre concentrated (AFFF) ESP	8127-07-01
	Label diluted extinguisher fluid 0 degrees (AFFF) ENG	8128-002-01
	Label diluted extinguisher fluid 0 degrees (AFFF) ESP	8128-007-01

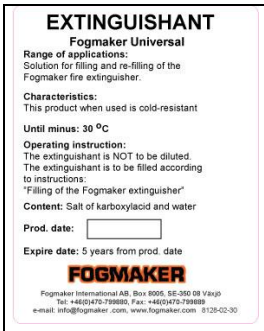	Label diluted extinguisher fluid universal 30 degrees ENG	8128-02-30
	Label diluted extinguisher fluid universal 30 degrees ESP	8128-07-30
	Label Novec 1l Swedish	8129-01-01
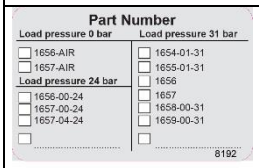	Label/Sticker Part number detector cylinder	8192
	Label/Sticker Actuator SWE	8201-01
	Label/Sticker Actuator ENG	8201-02
	Label/Sticker "The engine compartment" ENG	8203
	Label/Sticker "The engine compartment" SWE	8204
	Label/Sticker "The engine compartment" ESP	8204-07
	Label/Sticker "Brandlarm" SWE	8205-01
	Label/Sticker "Fire alarm" ENG	8205-02
	Label/Sticker "Brand alarm" DE	8205-03
	Label/Sticker "Alarm de'incendie" FR	8205-06
	Label/Sticker "Alarm de incendio" ESP	8205-07
	Sticker Detector tube ENG-SWE	8206
	Sticker Detector tube TR	8206-011
	Sticker Detector tube ENG-PL	8206-PL
	Sticker Detector tube ENG-FR	8209
	Sticker Detector tube ENG-ESP	8211* Replaced by 8220
	Sticker Detector tube ENG-RO	8218
	Sticker Detector tube ENG-IT	8219
	Sticker Detector tube Pictogram	8220
	Sticker Detector tube DE-RO	8222

	Label/Sticker "Attention contains gas" ENG-SWE	8207
	Label/Sticker "Attention contains gas" IT	8207-007
	Label/Sticker "Attention contains gas" TR	8207-011
	Label/Sticker "Attention contains gas" ESP	8207-07
	Label/Sticker "Attention contains gas" FR	8212
	Fogmaker logo 10x3	8208-01
	Plate Activation engine room sprinkler SWE	8221
	Plate Activation engine room sprinkler ENG	8221-01
	Plate "Activation of fire extinguisher system" SWE	8300
	Plate "Activation of fire extinguisher system" ENG	8302
	Plate "Activation of fire extinguisher system" DE	8304
	Plate "In case of fire" Manual SWE	8301
	Plate "In case of fire" Manual ENG	8303
	Plate "In case of fire" Manual DE	8305
	Plate "In case of fire" Auto SWE	8306
	Plate "In case of fire" Auto ENG	8307
	Plate "In case of fire" Auto DE	8308
	Sign "Engine fire"	8315
	Sign "Fogmaker Test"	8315-10
	Label/Sticker "Drivers info" Auto SWE	8421

	Label/Sticker "In case of fire" Auto SWE	8422
	Label/Sticker "In case of fire" Auto ESP	8422-07
	Label/Sticker "In case of fire" Auto RO	8422-08
	Plate "In case of fire" Auto SWE	8422-01-Al
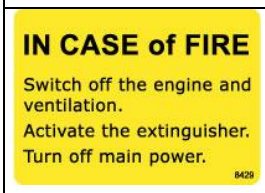	Label/Sticker "In case of fire" Mec SWE	8428
	Label/Sticker "In case of fire" Mec ESP	8428-07
	Label/Sticker "In case of fire" Mec ENG	8429
	Label/Sticker "In case of fire" Mec DE	8429-03
	Label/Sticker "Fire suppression system" Auto ENG	8430
	Label/Sticker "Fire suppression system" Auto ESP	8430-007
	Label/Sticker "Fire suppression system" Auto DE	8430-01
	Label/Sticker "Fire suppression system" Auto TR	8430-011
	Label/Sticker "Fire suppression system" Auto FR	8430-06
	Label/Sticker Drivers Information ENG	8431
	Label/Sticker Drivers Information NL	8433
	Label/Sticker "Detector gas cylinder" ENG	8435
	Label/Sticker "Detector gas cylinder" FR	8213
	Label/Sticker "Drivers info" Mec SWE	8436
	Label/Sticker "Drivers info" Mec ESP	8436-07
	Sticker this engine room is protected ENG-FR	8460
	Sticker this engine room is protected ENG	8461
	Sticker this engine room is protected ESP	8461-07

Notes:

Fogmaker International AB

Postal address:	Visiting address:	Tel: +46 470-77 22 00
Box 8005	Sandvägen 4	Fax: +46 470-77 22 10
350 08 Växjö	352 45 Växjö	info@fogmaker.com
SWEDEN	SWEDEN	www.fogmaker.com